

Modified: Programming Barcodes for DS9808


Configuration name in Utility :	Modified
Last Modified :	18-okt-23
Windows Filename :	Fieret.scncfg
Plug-in Name :	DS9808-COMMON SR MODELS-025
ADF Version :	v1.1
Report Type :	Only parameters changed from defaults shown



Barcodes 1 of 2

Modified: Programming Barcodes for DS9808

Configuration name in Utility :	Modified
Last Modified :	18-okt-23
Windows Filename :	Fieret.scncfg
Plug-in Name :	DS9808-COMMON SR MODELS-025
ADF Version :	v1.1
Report Type :	Only parameters changed from defaults shown

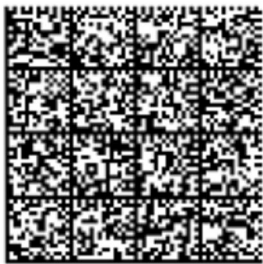

Barcodes 2 of 2

Modified: Programming Barcodes for DS9808

Configuration name in Utility : Modified
Last Modified : 18-okt-23
Windows Filename : Fieret.scncfg
Plug-in Name : DS9808-COMMON SR MODELS-025
ADF Version : v1.1
Report Type : Only parameters changed from defaults shown



Set Factory Defaults

Cable Connection Settings

USB

USB Device Type	SNAPI
HID Polling Interval	8 msec
Fast HID Keyboard	Disable

Single RS232C

RS-232 Host Type	Standard Host
Serial Response Timeout	Minimum - 2 Sec
Beep on BEL	Enable

Symbology (bar code type) Settings

Codabar

Codabar Length 1	5
------------------	---

Code 128

Code 128 Length 1	0
Code 128 Length 2	0

Code 39

Code 39 Length 1	2
------------------	---

GS1 Databar

GS1 Databar Limited	Disable
---------------------	---------

Modified: Programming Barcodes for DS9808

Configuration name in Utility : Modified
Last Modified : 18-okt-23
Windows Filename : Fieret.scnfcg
Plug-in Name : DS9808-COMMON SR MODELS-025
ADF Version : v1.1
Report Type : Only parameters changed from defaults shown



GS1 Databar Expanded	Disable
Interleaved 2 of 5	
Interleaved 2 of 5 Length 1	0
Interleaved 2 of 5 Length 2	0
Matrix 2 of 5	
Matrix 2 of 5 Length 1	14
Matrix 2 of 5 Length 2	0
Other 2D Symbolologies	
Data Matrix Inverse	Regular
QR Code	Disable
Symbology Security Level	
Security Level	Level 0
UPC EAN	
User-Programmable Supplemental 1	65535
User Programmable Supplemental 2	65535
Modify Data- Advanced Data Formatting	
Erase All Rules	
Begin New Rule	
1. Send ASCII Key <CTRL B/START OF TEXT>	
2. Send All that remains	

Save Rule

123Scan | Configuration Utility for Zebra Scanners